

**AR620X, GT6201, RCU6201**



Figure: XX6201

**"Long press"**: when pressing and holding down a key for at least 2 seconds ( $\geq 2$  s).  
**"Short press"**: any pressing below 2 seconds ( $< 2$  s).  
If any action by the user is invalid, the whole display inverting for a short time.

**Store:**

Access depends on configuration settings.

- Short press of "STO" key stores the active frequency into the next vacant memory place.
- It is possible to apply a customized label for the memory place (max. 10 characters).

|   | <b>Symbol</b>                                                                     | <b>Function</b>                                                                                                                                                                            |
|---|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 |  | "Short press" during normal operation = RX -SQL ON/OFF.<br>"Long press" during normal operation = Intercom Menu.                                                                           |
| 2 |  | "Short press" during normal operation = Frequency Selection Mode >ON.<br>"Long press" during normal operation = Pilots Menu.                                                               |
| 3 |  | "Short press" during normal operation = Storage procedure.                                                                                                                                 |
| 4 |  | "Short press" during Standard Mode, or Scan Mode toggles between preset and active frequency.<br>"Long press" = Scan Mode.                                                                 |
| 5 |  | Transceiver ON/OFF and adjusts volume level of received signal.                                                                                                                            |
| 6 |  | Turning "ROTARY ENCODER" changes the settings of several parameters (frequency, IC volume, VOX, ...).<br>Pushing the "ROTARY ENCODER" toggles between the digits and acts as an enter key. |
|   | -8/25-                                                                            | Change of Channel Spacing<br>MDE and STO button pressed simultaneously $> 2$ s changes 8.33 to 25 kHz channel spacing and vice versa.                                                      |
| 7 | Display                                                                           | LCD: Liquid Crystal Display                                                                                                                                                                |
| 8 | Active frequency                                                                  | Only on the active frequency, transmitting is possible and receiving has priority, even in Scan Mode. Frequency tuning is not possible in Standard Mode.                                   |

**AR620X, GT6201, RCU6201**

|          | <b>Symbol</b>    | <b>Function</b>                                                                                                                                                                                                                                                                                                                       |
|----------|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>9</b> | Preset frequency | Frequency tuning is possible in Standard Mode.<br><br>In Scan Mode both frequencies, active and preset are in listening watch.<br><br>If no receive signal is detected on the active frequency, receiving signals on the preset frequency will be audible, but will be muted as soon as a signal on the active frequency is detected. |

**AR620X, GT6201, RCU6201**



Figure: XX6201

|  | <b>Symbol</b> | <b>Function</b>                                                                             |
|--|---------------|---------------------------------------------------------------------------------------------|
|  | IC            | Intercom operation is active (triggered by VOX or external IC key)<br><br>Speaker is muted. |
|  | ✗             | Intercom operation via VOX is disabled                                                      |
|  | TX            | Transceiver is in transmit operation                                                        |
|  | SQL           | Squelch function is active, weak RX signals suppressed.                                     |
|  | SCAN          | Transceiver operates in Scan Mode                                                           |
|  | STO           | The transceiver performs a storage operation.                                               |
|  | LOW BATT      | Battery below predefined low threshold                                                      |
|  | 128.000       | Inverted figures or letters on display ready to edit                                        |
|  | Speaker icon  | Speaker on.                                                                                 |